

SpokeBrightz™


Instructions

©Copyright Brightz, Ltd. 2016
Patent Pending • All rights reserved

Step 1 - Pull tab to activate batteries

Step 2 - On/Off Function

The On/Off button is located on the side of the round battery pack. Press once for **ON/Flash** function. Press twice to activate **Constant/Steady** function. Press 3 times to turn **OFF**.

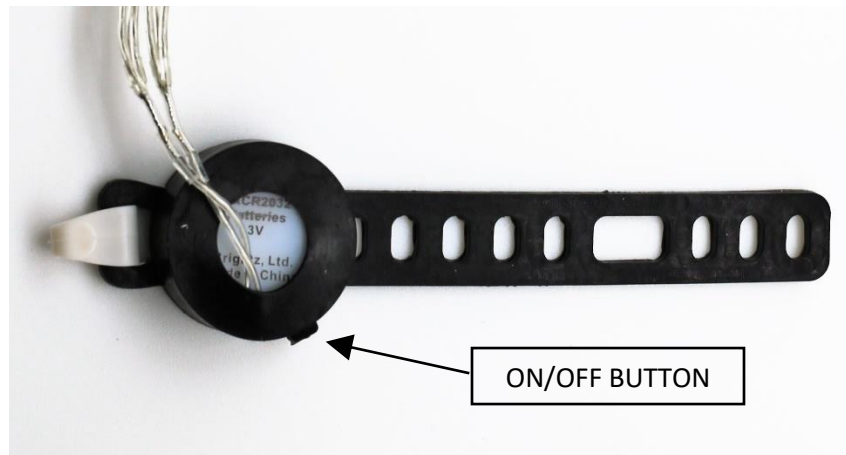

Step 3 - Fasten battery pack around bicycle wheel hub. Ensure that "S" fastener is securely positioned so the battery pack will not come loose.



Step 4 - Twist each light string around desired spokes. Note: SpokeBrightz™ package includes zip ties. These are not necessary for installation, but can be used if desired.



IMPORTANT BATTERY INFORMATION: SpokeBrightz™ includes 2 CR 2032 batteries.



WARNING! Keep watch batteries away from children. If swallowed, contact a doctor immediately. Batteries contain chemical substances. They should be disposed of properly according to local regulations.



Battery replacement: Open battery compartment by removing the 2 screws with screwdriver. Remove batteries, taking care to replace both CR2032 batteries at the same time. Replace battery cover by repositioning 2 screws. Dispose of old batteries according to local regulations.

Do not mix old and new batteries and do not mix alkaline, standard (carbon-zinc) or rechargeable (nicad, ni-mh, etc.) batteries.



Caution: Batteries may explode or leak, and cause burn injury if recharged, disposed of in fire, mixed with a different battery type, or inserted backwards. Replace all used batteries at the same time. Clean battery contacts and contacts on the device prior to installing. Remove batteries if item will not be used for long periods of time. When battery expires remove promptly.

Brightz, Ltd.

8000 Yankee Road, Suite 225, Ottawa Lake, MI 49267

Email: info@brightz-ltd.com

www.brightz-ltd.com